



POPCORN POPPER CART OPERATING INSTRUCTIONS

Machine operates on 120 volt, 60 cycle, single phase, and AC current.

For best flavor, pop 4 or 5 batches in a row to fill the popcorn window. You will be prepared to serve guests too.

DO NOT USE EXTENSION CORDS
Plug the machine directly into the appropriate wall outlet.

CONTROLS

Light Switch – turns on the heat lamp
Kettle Motor Switch – turns on motor switch drives the kettle agitator shaft
Kettle Heat Switch – turns on heat element inside the kettle

MOTOR AIR INTAKE AND EXHAUST

Holes are located on top of the machine. These must always remain clear, **DO NOT COVER AIR VENT HOLES** as serious damage may result and REPAIR CHARGES will be assessed.

To Start Popping

Turn the Kettle Heat switch and Kettle Motor & Exhaust Switch ON.
Test Pop a kettle of corn. Place $\frac{1}{4}$ of the proper oil measure in the kettle with 3 kernels of unpopped corn. As soon as the 3 kernels pop, place the balance of the oil, plus the measured amount of kernels from the packet.

After the corn has finished popping, rotate the handle to dump the popcorn still in the kettle. Return the kettle to the upright position. Repeat the cycle-adding oil, kernels, popping, dumping... Always pop 4 or 5 batches in a row to obtain the best quality popcorn. Periodically, remove the "old maid" pan and empty unpopped kernels. On the final kettle of corn, turn the Kettle Heat switch OFF. There will be sufficient heat to pop the remaining corn. The kettle will not overheat and smoke and burnt odors are prevented.

When finished, make sure the Kettle Heat and Kettle Motor & Exhaust switches are turned OFF. **NEVER LEAVE THE HEAT ON WHEN NOT POPPING CORN.**

Turn all switches to OFF at the close of operations. With the machine unplugged, and when the kettle is not too hot to handle, remove the kettle from the machine and wipe all parts clean. **DO NOT IMMERSE KETTLE IN WATER!**

For multiple day use, store any popped corn in plastic bags. Wipe the interior of the machine clean with 409 or Windex type spray cleaner. Wipe again with plain water. Please clean the machine at the end of your rental period.

Contact us anytime for questions concerning the use of this equipment.

Monday - Friday 8-5, Saturday 8-Noon 972-381-8000

Fort Worth location closed Saturday

Extended Service Hours 469-576-3747

07/03